




Building orientation

For maximum solar efficiency the building should be orientated along the 'North to South' axis of the site. This will assist with a reduction in heating costs.

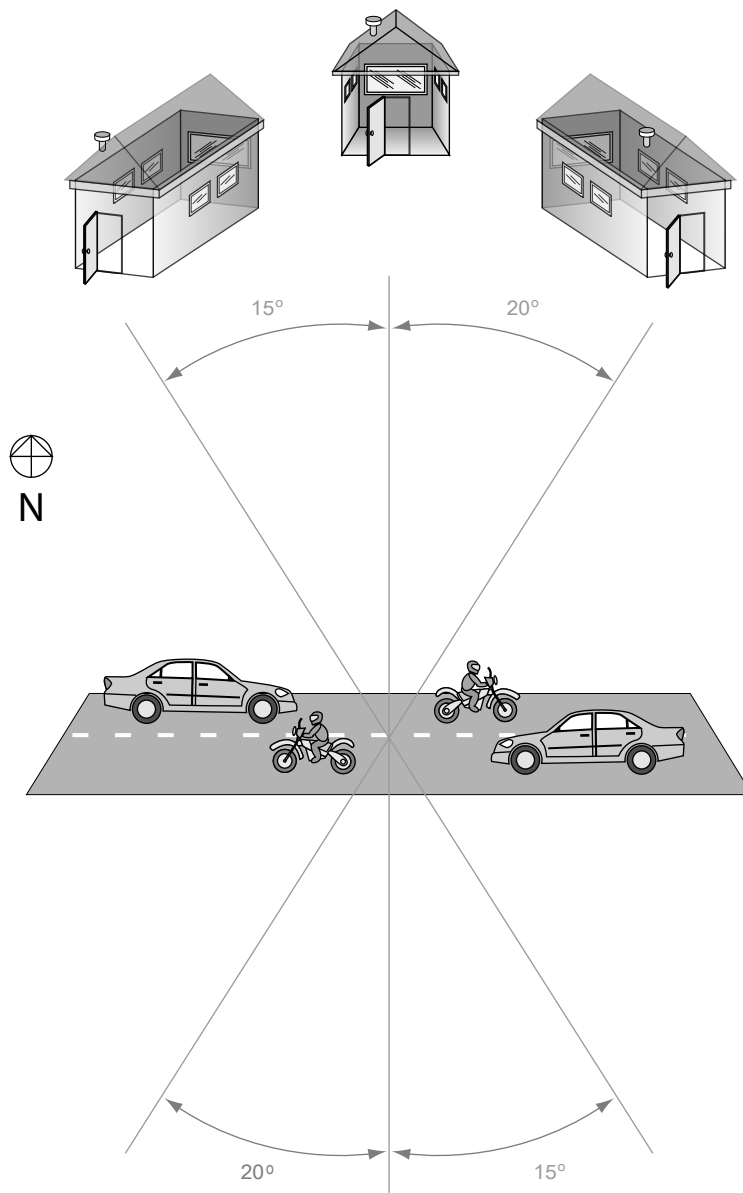

RULE OF THUMB

Living areas and the maximum amount of glazing should be to the North. The minimum amount of glass should be to the East and West.